# **OPERATION**

CLICK 5 TIMES TO TURN ON AND OFF CLICK 4 TIMES TO CHANGE TEMPERATURE CLICK 2 TIMES TO TURN ON ACTIVE MODE









#### WWW.ROKINVAPES.COM **@ROKINVAPES**



DO NOT LOAD CONTENTS ABOVE THE AIRHOLES ON ATOMIZER WALL















THIS PRODUCT IS INTENDED TO BE USED AS AN AROMATHERAPY DEVICE. NOT FOR USE WITH TOBACCO OR NICOTINE PRODUCTS.

USING TOBACCO OR NICOTINE PRODUCTS MAY BE HARMFUL

FOR THE DEVICE, NOT FOR PURPOSES PROHIBITED BY STATE





## **ACTIVE MODE**

CLICK BUTTON 2 TIMES, ACTIVE MODE WILL TURN ON. FLASHING FOR 14 SECONDS. ACTIVE MODE CAN BE USED IN ANY TEMPERATURE SETTING. [WARNING] ATOMIZER MAY BE HOT AFTER USE.

### **CLEANING**

HOLD THE ROKIN UPSIDE DOWN WITH THE COIL/BOWL EXPOSED OVER A DAMP RAG OR DISPOSABLE TOWEL. PRESS THE R BUTTON UNTIL THE CHAMBER IS CLEARED. WIPE THE THREADING WHEN NEEDED.

COILS WILL LAST LONGER WITH PROPER CARE AND CLEANING EVERY ROKIN IS CERTIFIED LEAD FREE

### **DEVELOPED AND DESIGNED IN THE USA** MADE IN CHINA

OR FEDERAL LAWS.

**PATENT PENDING** 

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: 1.THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE 2.THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED. INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

## **CHARGING**

ROKIN VAPORIZERS HAVE SURGE PROTECTION, TO ENSURE THE SAFETY OF YOUR DEVICE, FOLLOW THE INSTRUCTIONS BELOW.

- 1. PLUG USB WALL CHARGER INTO POWER SOURCE.
- 2. PLUG BATTERY CHARGER INTO USB WALL CHARGER.
- 3. ATTACH BATTERY TO CHARGER.









**GREEN LIGHT INDICATES** UNIT IS FULLY CHARGED

