


# OUTRIDER

## HERBAL VAPORIZER

- CONVECTION HEATING
- ATTACHED GLASS MOUTHPIECE
- FOUR TEMPERATURES
- USB-C FAST CHARGE
- HAPTIC FEEDBACK
- BATTERY LIFE INDICATOR
- 1200 MAH BATTERY
- FLIP TOP LID DESIGN
- LITHIUM-ION BATTERY
- 12 MONTH WARRANTY



### OUTRIDER SPECS

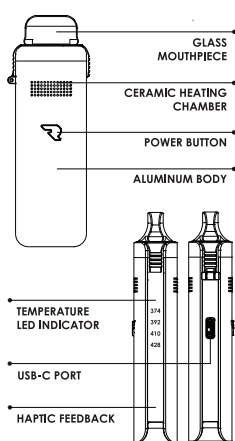

FOR AROMATHERAPY USE ONLY  
NOT FOR TOBACCO USE  
MADE IN CHINA

PRODUCT NAME: OUTRIDER  
BATTERY CAPACITY: 1200 MAH  
RESISTANCE: 0.45-0.55Ω  
OUTPUT: 374°F/392°F/410°F/428°F

CONTENTS:  
OUTRIDER BATTERY  
1x CLEANING BRUSH  
1x USB-C CHARGER CABLE  
USER'S MANUAL

**WARNING!**  
THIS PRODUCT IS INTENDED TO BE USED AS AN AROMATHERAPY DEVICE. NOT FOR USE WITH TOBACCO OR NICOTINE PRODUCTS. USING TOBACCO OR NICOTINE PRODUCTS MAY BE HARMFUL FOR THE DEVICE. NOT FOR PURPOSES PROHIBITED BY STATE OR FEDERAL LAWS. THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
1. THE DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.  
2. THE DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.



OUTRIDER



SCAN TO WATCH TUTORIALS  
OR CONTACT SUPPORT

### GETTING STARTED

THE OUTRIDER DEVICE IS FOR DRY MATERIAL ONLY.

FILL HEATING CHAMBER LOOSELY. OVER PACKING WILL CAUSE CLOGGING.

THE DEVICE WILL STOP HEATING IF THE MOUTHPIECE IS DISCONNECTED.

### CHARGING

BATTERY CAPACITY: 1200 MAH

LOW BATTERY INDICATOR:  
WHEN THE DEVICE IS LOW ON POWER, THE DEVICE WILL FLASH RED 10 TIMES.

BATTERY LIFE INDICATOR:  
BUTTON COLOR WILL INDICATE HOW CHARGED THE DEVICE IS.

RED: 0-5%  
GREEN: 5-50%  
BLUE: 50%-99%

WILL ALSO ILLUMINATE BATTERY CHARGE WHILE CHARGING.

BUTTON LIGHT WILL TURN OFF WHEN FULLY CHARGED.

### HOW TO USE

PRESS BUTTON 5 TIMES RAPIDLY TO TURN DEVICE ON/OFF.

THE DEVICE WILL VIBRATE AND ALL LIGHTS WILL FLASH 3 TIMES.

TO START PREHEATING DEVICE, PRESS BUTTON TWICE RAPIDLY.

THE DEVICE WILL START HEATING THE MATERIAL.

THE DEVICE BUTTON WILL STAY ON WHILE THE TEMPERATURE LIGHT PULSES.

THE DEVICE WILL VIBRATE ONCE WHEN IT IS AT DESIRED TEMPERATURE, AND IS READY TO INHALE.

THE TEMPERATURE LIGHT WILL THEN BE SOLID ON FOR THE DURATION OF THE HIT.

THE DEVICE WILL STAY AT DESIRED TEMPERATURE FOR 2 MINUTES.

PRESS BUTTON TWICE DURING HIT TO MANUALLY STOP HEATING.

THE DEVICE WILL VIBRATE TWICE AND ALL LIGHTS WILL TURN OFF WHEN HEATING ENDS.

### TEMPERATURES

374°F • 392°F • 410°F • 428°F

PRESS BUTTON 3 TIMES TO CHANGE TEMPERATURE.

DEVICE WILL VIBRATE AND THE TEMPERATURE LIGHT WILL FLASH 3 TIMES ON THE SIDE OF THE DEVICE.

### CLEANING

THE MOUTHPIECE CAN BE CLEANED BY REMOVING IT FROM THE DEVICE AND SOAKING IN ISOPROPYL ALCOHOL.

THE MOUTHPIECE SCREEN CAN ALSO BE REMOVED FOR CLEANING.

DO NOT SUBMERGE THE DEVICE AT ANY TIME.

DEVICE IS COVERED BY A 12 MONTH WARRANTY. PLEASE KEEP YOUR RECEIPT

CAUTION: DEVICE MAY BE HOT AFTER USE