


STINGER

ELECTRONIC DAB STRAW

STINGER CONTROLS

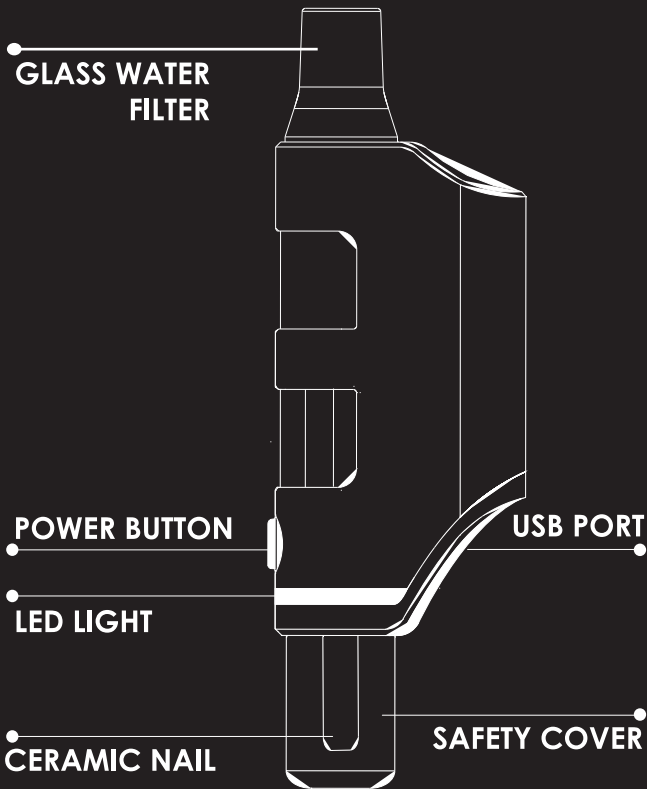

**CAUTION: DEVICE WILL BE VERY HOT AFTER USE
PLEASE USE CAUTION WHEN HANDLING CERAMIC TIP
NEVER TOUCH THE CERAMIC TIP WHEN IN USE**



FILL WATER BUBBLER UP TO THE TOP OF THE VERTICAL SLITS ON THE INSIDE OF THE FILTER. DO NOT OVERFILL.

FILL LINE

HOW TO USE

REMOVE WATER FILTER FROM BASE. FILL WATER FILTER, FILLING UP TO THE TOP OF THE VERTICAL SLITS ON THE INSIDE OF THE FILTER. DO NOT OVERFILL. REPLACE FILTER TO THE BASE.

CLICK THE POWER BUTTON 5 TIMES RAPIDLY TO TURN ON AND OFF. BLUE LIGHT WILL FLASH THREE TIMES. REMOVE SAFETY COVER.

TO PREHEAT, PRESS BUTTON 2 TIMES RAPIDLY TO START, LIGHT WILL CYCLE THROUGH THE COLORS FOR 15 SECONDS AT 1.8v. PREHEAT FOR BEST RESULTS.

HOLD BUTTON TO ACTIVATE THE CERAMIC TIP. LIGHT WILL PULSE. LIGHTLY TOUCH THE TIP AGAINST YOUR MATERIAL, AND INHALE.

THE DEVICE HAS AN ACTIVATION OF 15 SECONDS. AFTER 15 SECONDS THE LIGHT WILL FLASH 5 TIMES THEN TURN OFF.

TURN OFF DEVICE AND REPLACE SAFETY COVER AFTER USE.

CLEANING

USE CAUTION WHEN HANDLING CERAMIC TIPS. ALLOW TIME TO COOL DOWN CERAMIC TIPS BEFORE HANDLING.

REMOVE WATER FILTER CAREFULLY.

WATER FILTER CAN BE CLEANED BY SOAKING IN ISOPROPYL ALCOHOL. RINSE CLEAN WITH WATER AFTER USE.

KEEP TIP AND TUBE FREE OF DEBRIS. USE ISOPROPYL ALCOHOL AND INCLUDED BRUSH FOR BEST RESULTS.

CHANGE CERAMIC TIP WHEN FLAVOR OR EFFECTIVENESS WEARS DOWN.

TO CHANGE CERAMIC TIP, UNSCREW THE PIECE FROM THE BATTERY. MAKE SURE CONNECTION POINT IS CLEAN AND SCREW ON NEW TIP.

WHITE LIGHT WILL FLASH WHEN CERAMIC TIP IS READABLE BY THE BATTERY.

EMPTY WATER FILTER WHEN NOT IN USE.

CHARGING

BATTERY CAPACITY: 1100MAH

LOW BATTERY INDICATOR: WHEN THE DEVICE IS LOW ON POWER, THE DEVICE WILL FLASH RED 10 TIMES.

DURING THE CHARGING PROCESS, THE RED LIGHT IS ALWAYS ON, AND THE GREEN LIGHT IS ALWAYS ON ONCE FULLY CHARGED.

VOLTAGE

BLUE - 3.4v

GREEN - 3.6v

YELLOW - 3.8v

RED - 4.0v

PRESS BUTTON 3 TIMES TO CHANGE TEMPERATURE/VOLTAGE

CONTENTS:

STINGER BATTERY
1X CERAMIC TIP
1X CLEANING BRUSH
1X USB CHARGER CABLE
USER MANUAL